

# SECTION 1 - 1

---

## INSTRUMENTS AND CONTROLS


### Keys and doors

Keys ..... 8

Doors ..... 9

## KEYS AND DOORS

### KEYS

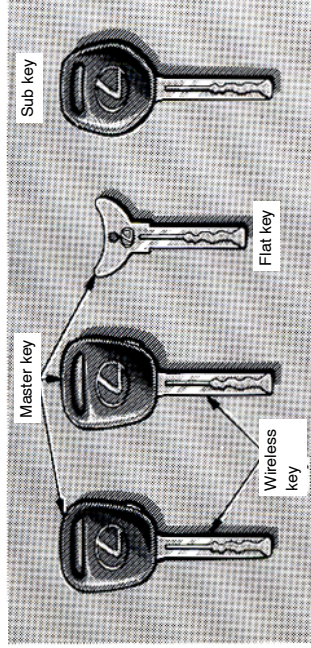


**The master keys work in every lock. The subkey will not open the trunk, trunk main switch and the glovebox.**

To protect things locked in the trunk or glovebox when you have your vehicle parked, leave the subkey with the attendant. Since the doors and trunk lid can be locked without a key, you should always carry a spare master key in case you accidentally lock your keys inside the vehicle.

#### **Wireless keys:**

- Avoid knocking them hard against other objects.
- Avoid putting them in water.

For information on use of the wireless remote control key, see page 11.

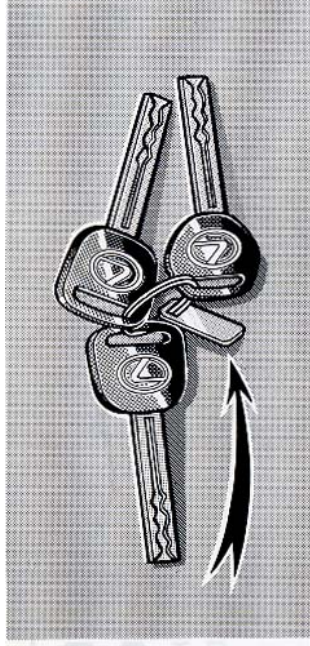


**Keep the key number plate in a safe place such as your wallet, not in the vehicle.**

If you should require replacement or additional keys for any reason, contact your Lexus dealer.

You should also put a copy of the key number with your important papers.


## DOORS

### Locking with key

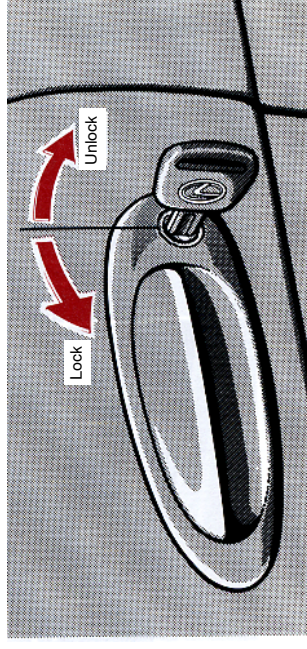

Turn the key towards the front of the vehicle to lock and towards the back to unlock.

Both side doors lock and unlock simultaneously with either front door. In the driver's door lock, turning the key once will unlock the driver's door and twice in succession will unlock both side doors simultaneously. In the passenger's door lock, turning the key once will unlock both side doors simultaneously.

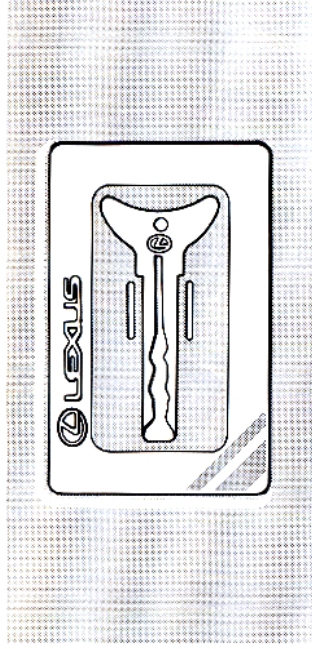

Insert your flat key in its key case as shown. We recommend that you always carry this with you as a spare. Do not leave it in your vehicle.


**NOTICE:**

- Do not let the key case become bent as the key may fall out or become bent also.
- The flat key is designed for emergency use only, so do not use it regularly instead of the other master keys.



## KEYS AND DOORS

### Locking with inside lock button

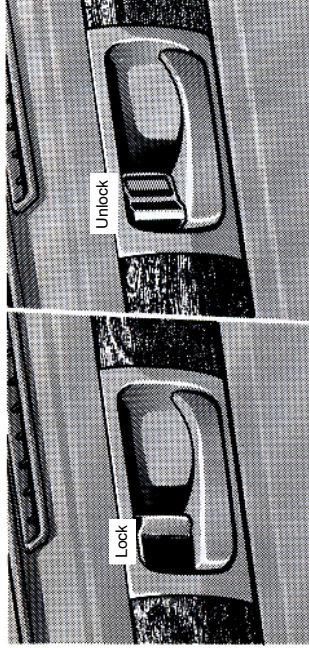

**Push in the lock button to lock and unlock the door.**



When locked, the door cannot be opened with either the outside or inside door handle.

Closing the door with the lock button pushed in will also lock the door. Be careful not to lock your keys in the vehicle. The door will not lock if the key is left in the ignition switch.

#### **CAUTION:**

**Before driving, make sure the doors are closed and locked. Along with the proper use of seat belts, locking the doors helps prevent the driver and passengers from being thrown out from the vehicle during an accident. It also helps prevent the doors from being opened unintentionally.**


### Locking with power door lock switch

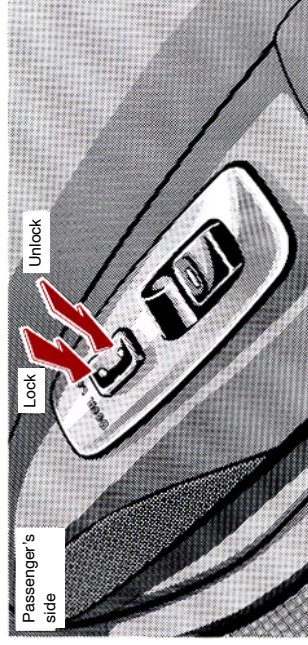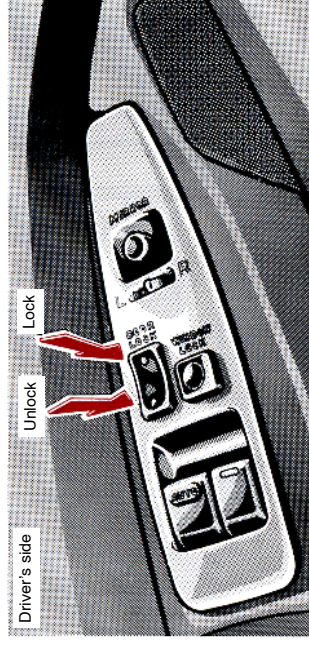

To lock both side doors simultaneously, push the power door lock switch on the "DOOR LOCK" side. Pushing on the opposite side will unlock them.

## KEYS AND DOORS

### Locking with wireless remote control key

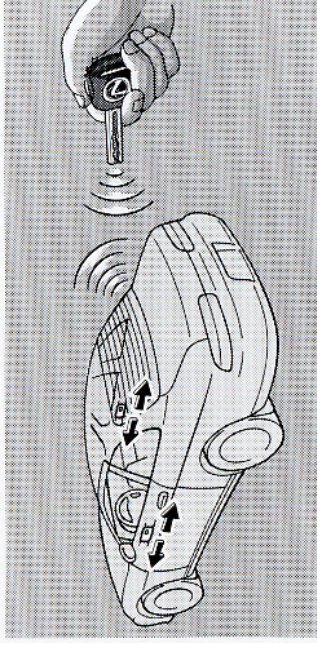

**When you push the remote control switch of the master key, all the doors can be locked or unlocked from outside the vehicle.**

However, if any door is not closed securely or the key is in the ignition switch, locking cannot be done by the remote control switch.

When you push the remote control switch, the vehicle sounds one beep when the doors are locked by remote control, and two beeps when the doors are unlocked.

The operational range of the wireless remote control is approximately 1 meter (3 feet) from the outside handle of the driver's door. The effective range may vary with different conditions.

You have 30 seconds to open a door after using the remote unlock feature. If a door is not opened by then, both side doors will automatically relock.

When any door is unlocked, pushing the remote control switch locks all the doors. To unlock the doors, push the switch again.

Continued pushing of the remote control switch will not cause repeated locking and unlocking of the doors. To reverse the operation performed by the remote control switch, the switch must first be released, then pressed again.

If pushing the remote control switch does not actuate the doors, have your vehicle checked by your Lexus dealer.

**For vehicles sold in U.S.A.**

**FCC ID: HYQ1512A  
MADE IN JAPAN**

This device complies with FCC rules part 15. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference that may be received, including interference that may cause undesired operation.