


BASIC OPERATION

QUICK REFERENCE



 



 
 


 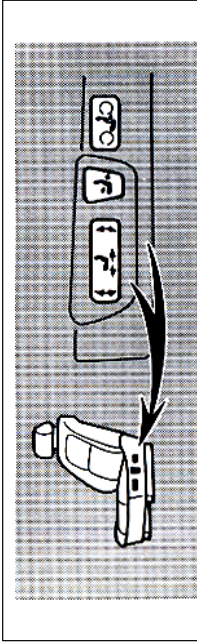



 


 


 




 
 

Driver's seat	2
Steering wheel (Power type)	2
Steering wheel (Manual type)	3
Automatic transmission	4
Headlight and turn signal switch	5
Wiper switch	6

BASIC OPERATION – QUICK REFERENCE

1. DRIVER'S SEAT




Seat adjustment


2. STEERING WHEEL (Power type)

• TILT STEERING WHEEL

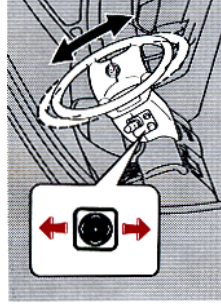

To tilt the steering wheel up or down to the desired angle, push the control button in the required direction and release the button when the steering wheel reaches the desired angle.


• TELESCOPIC STEERING WHEEL

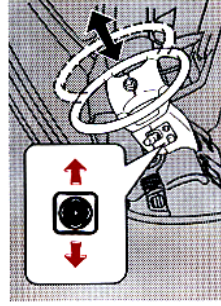

To move the steering wheel to the desired position, push the control button away from you or pull it toward you until the steering wheel reaches the desired position.

3. STEERING WHEEL (Manual type)


- TILT STEERING WHEEL

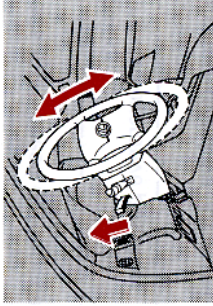

To tilt the steering wheel up or down to the desired angle:

1. Push the lever up while holding the steering wheel.
2. Push or pull the steering wheel to the desired angle.
3. Release the lever.

- TELESCOPIC STEERING WHEEL

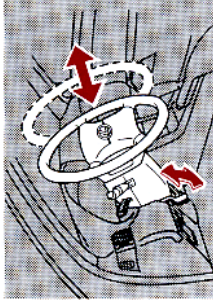


To move the steering wheel to the desired position:

1. Push the lever down.
2. Push or pull the steering wheel to the desired position.
3. Pull the lever up to lock the steering wheel in position.

BASIC OPERATION – QUICK REFERENCE

4. AUTOMATIC TRANSMISSION

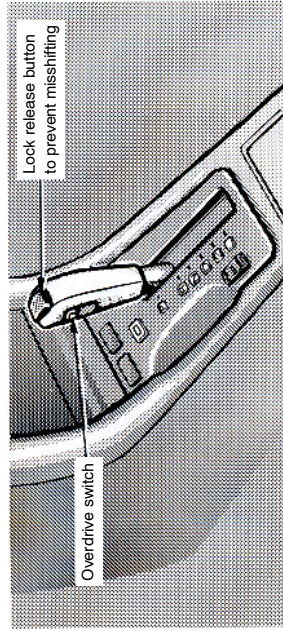

OPERATION OF OVERDRIVE SWITCH

For selecting either a three-speed or four-speed transmission

 
 
 


ON position
(Shifting into overdrive possible)

 
 

 
 

OFF position
(Shifting into overdrive not possible)

SELECTOR LEVER POSITION	INDICATION	OPERATION OF SELECTOR LEVER
Parking, engine starting and key removal position		<p>With the brake pedal depressed, shift while holding the lock release button in "ON" position.)</p>
Reverse position		<p>Shift while pressing the lock release button in</p>
Neutral position		<p>Shift without pressing the button</p>
Normal driving position Position for engine braking Position for stronger engine braking than that in "2" position		

BASIC OPERATION – QUICK REFERENCE

5. HEADLIGHT AND TURN SIGNAL SWITCH

<p>● HEADLIGHT SWITCH (FOR U.S.A.)</p>	
	<p>Parking, tail, license plate, side marker and instrument panel lights turn on.</p>
	<p>Headlights also turn on.</p>
	<p>Automatic light control</p>
	<p>High beam</p>
	<p>Headlight flasher</p>

<p>● HEADLIGHT SWITCH (FOR CANADA)</p>	
<p>With the ignition OFF</p>	
	<p>Parking, tail, license plate, side marker and instrument panel lights turn on.</p>
	<p>Headlights also turn on.</p>
	<p>Automatic light control</p>
<p>With the engine started and parking brake released</p>	
	<p>Parking, tail, license plate, side marker and instrument panel lights turn on.</p>
	<p>Headlights turn on at full intensity.</p>
	<p>Automatic light control</p>

BASIC OPERATION – QUICK REFERENCE

	High beam
	Headlight flasher
● TURN SIGNAL SWITCH	
	Right or left turn
	Lane change (Right or left)

6. WIPER SWITCH

	Mist wiper operation
	Intermittent operation
	Low speed operation
	High speed operation
	Washer on