

# SECTION 1 - 2

---


## INSTRUMENTS AND CONTROLS

### Switches

Headlight switch	14
Headlight dimmer and turn signal switch	15
Fog light switch	16
Windshield wiper and washer switch	17
Rear window and outside rear view mirror defogger switch	18
Power window switches	19
Emergency flasher switch	20
Seat heater switches	21

## SWITCHES

### HEADLIGHT SWITCH

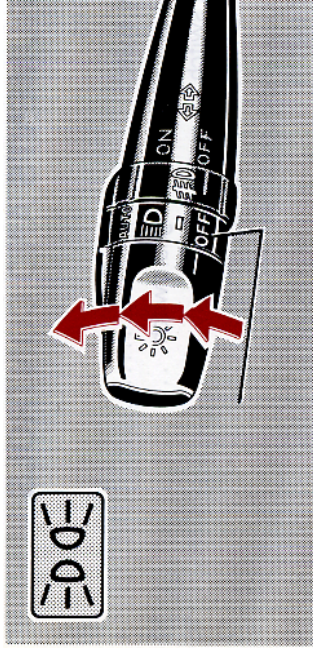


**To turn the lights on, twist the knob on the end of the lever.**

**FIRST CLICKSTOP:** Only the parking, tail, license plate, side marker and instrument panel lights turn on.

**SECOND CLICKSTOP:** Headlights also turn on.

**THIRD CLICKSTOP ("AUTO"):** The headlights and all other lights automatically turn on depending on the darkness of the surroundings.

**Manually twist the knob to the second clickstop to turn on the headlights if they are needed immediately when entering a dark tunnel, parking structure, etc.**

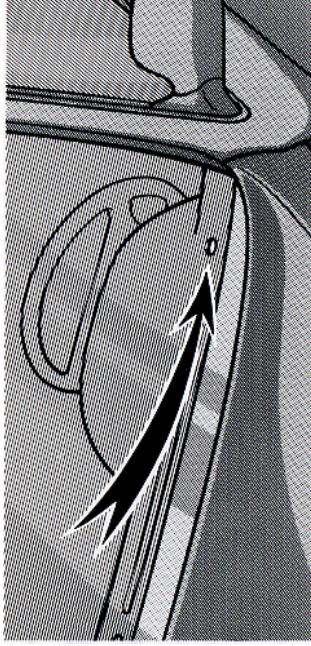


The automatic light control sensor is on top of the driver's side instrument panel.

Do not place anything on the instrument panel, and/or do not affix anything on the windshield to block this sensor.

The lights automatically turn off when the driver's door is opened with the ignition turned off. To turn them on again, turn the ignition key to the "ON" position or actuate the headlight switch. If you are going to park for over one week, make sure the headlight switch is off.

When the headlight switch is turned to the first or second clickstop, the brightness of the instrument cluster will be reduced slightly unless the instrument panel light control knob is turned fully on.

## HEADLIGHT DIMMER AND TURN SIGNAL SWITCH

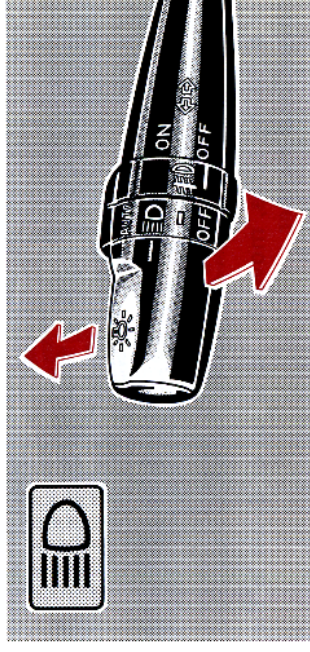

**For high beam, push the lever forward. Pull it back for low beam. For the headlight flasher, pull it further back.**

A blue light in the instrument cluster indicates high beam or headlight flasher is on.

The headlight flasher works even when the headlight switch is off.

### Daytime Running Light System (Canada only)

The headlights turn on when the parking brake is released with the engine started, even with the light switch in the "OFF" position. They will not go off until the ignition switch is turned off.

To turn on the other exterior lights and instrument panel lights, twist the knob to the first clickstop.


Under the daytime running light system, the headlights turn on at reduced intensity. Twist the knob to the second clickstop to turn to full intensity for driving at night.

When setting the knob to the third clickstop ("AUTO"), the headlights will automatically adjust to full intensity and/or turn on the other lights depending on the darkness of the surroundings. Likewise, as the surroundings become brighter, the headlights will turn to reduced intensity, ultimately turning off the other lights.

### NOTICE:

**To prevent the battery from being discharged, do not leave the lights on for a long period when the engine is not running.**

## SWITCHES

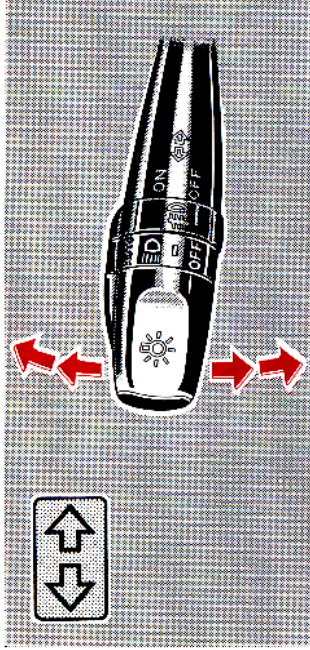


**For signaling turns, move the lever up or down in the conventional manner.**

The ignition key must be in the "ON" position.

The turn signal is self-cancelling after a turn, but after a lane change, you may have to cancel it by hand. You can also signal a lane change by moving the turn signal lever partway and holding it there. If the green light in the instrument cluster flashes faster than normal, it indicates that the front or rear turn signal bulb has burned out. If this indicator light does not come on, the fuse or the indicator light itself has probably failed. You may change headlight beam even while the turn signal lights are flashing.

## FOG LIGHT SWITCH

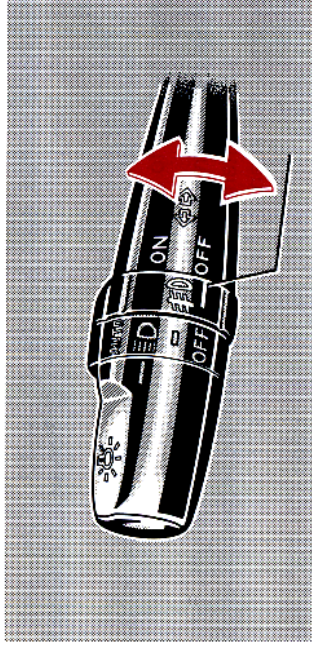


**To turn on the fog lights, turn the switch to the "ON" position. The fog lights come on only when the headlights are on low beam.**



## SWITCHES

### WINDSHIELD WIPER AND WASHER SWITCH

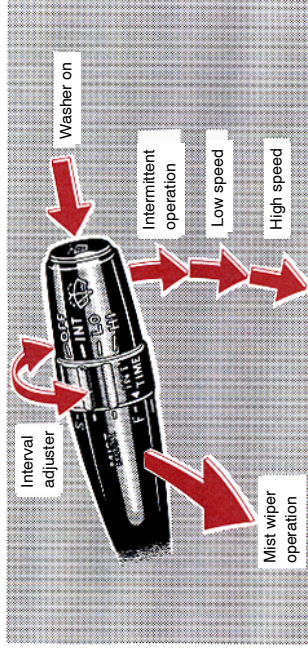

The low washer fluid reminder light in the instrument cluster comes on when the fluid level in the tank becomes nearly empty. For information on adding washer fluid, see “Adding washer fluid” on page 223.

In cold weather, warm the windshield with the defroster before using the washer. This will help prevent icing, which could block your vision.

**NOTICE:**  
Do not operate the wipers if the windshield is dry. It may scratch the glass.

**To turn the wipers on, move the lever down. To make the washer squirt, push the button on the end of the lever.**

The ignition key must be in the “ON” position.

 
For mist wiper operation (a single wipe), pull the lever toward you and release it.

The interval adjuster lets you adjust the wiping time interval between wiper sweeps if the wiper lever is in the “INT” position. Twist the lever upward to increase the time between sweeps, and downward to decrease it.

Also, the wipers will automatically operate a couple of times after the washer squirts even with the lever in the “OFF” position.

## SWITCHES

### REAR WINDOW AND OUTSIDE REAR VIEW MIRROR DEFOGGER SWITCH

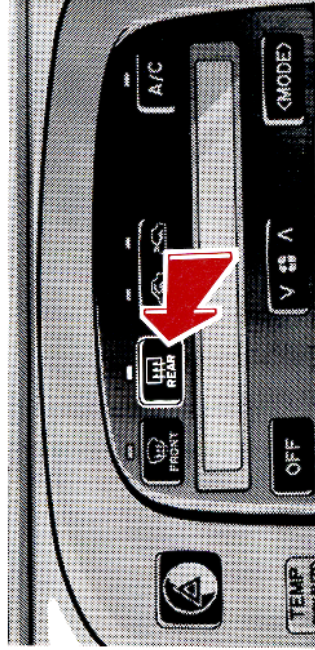

To turn the electric rear window defogger on, push the switch.

The ignition key must be in the "ON" position.

The thin heater wires on the inside of the rear window and the heater panels in the outside rear view mirrors will quickly clear the surface. Keep your hands off the mirror faces when the switch is on. An indicator light is on when the defogger is operating.

The system will automatically shut off when the defogger has operated about 15 minutes.


If further defrosting or defogging is desired, simply actuate the switch again. When the surface has cleared, push the switch once again to turn the defogger off. Continuous use may cause the battery to discharge, especially during stop-and-go driving. The defogger is not designed to dry rain water or to melt snow.

If the outside rear view mirrors are heavily coated with ice, use a spray de-icer before operating the switch.

#### NOTICE:


When cleaning the inside of the rear window, be careful not to scratch or damage the heater wires.

## POWER WINDOW SWITCHES

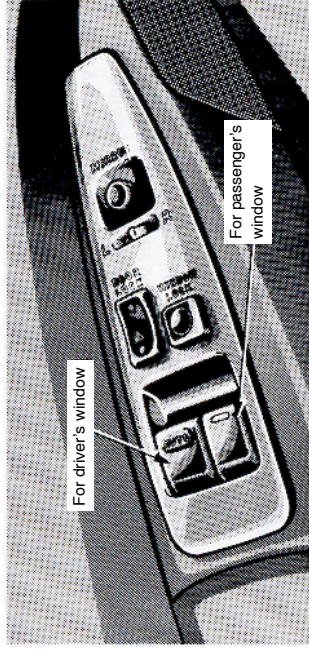

**To raise or lower the windows, use the switch on each door. The passenger's window can also be controlled by the switch on the driver's door.**

The ignition key must be in the "ON" position. However, even if the ignition key is turned to "OFF" position, the window can be operated until a front door is opened (or for about sixty seconds).

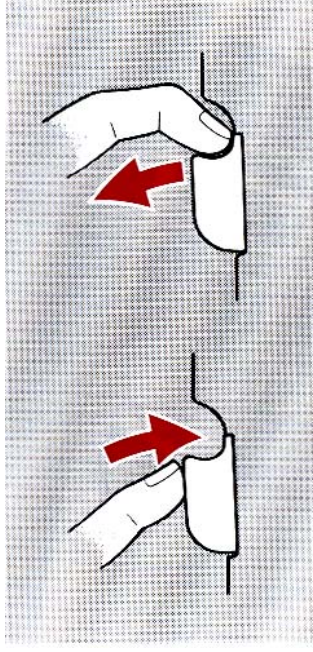

### Operating the driver's switch

**To lower the window, push the switch halfway down. Pull it up to raise the window. The window glass moves as long as the switch is operated.**

**To fully lower the driver's window automatically, push the switch fully down.**


In automatic operation, the window will fully open even if you let go of the switch. To stop the window partway, lightly pull the switch up and then release it.

### Operating the passenger's switch

**To lower the window, push the switch down. Pull it up to raise the window. The window moves as long as the switch is operated.**



## SWITCHES

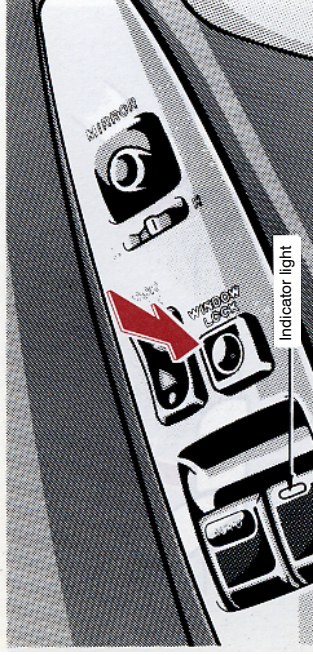

With the “WINDOW LOCK” switch pressed in, only the driver’s window can be raised or lowered.

The indicator lights on the switch tell you which of the switches can be operated.

### CAUTION:

 
To avoid serious personal injury, you must do the following.

- Always make sure the head, hands and other parts of the body of all occupants are kept completely inside the vehicle before you close the power windows. If someone’s neck, head or hands gets caught in a closing window, it could result in a serious injury. When anyone closes the power windows, be sure that they operate the windows safely.

- When small children are in the vehicle, never let them use the power window switches without supervision. Use the “WINDOW LOCK” switch to prevent them from making unexpected use of the switches.

- Never leave small children alone in the vehicle, especially with the ignition key still inserted. They could use the power window switches and get trapped in a window. Unattended children can become involved in serious accidents.

## EMERGENCY FLASHER SWITCH

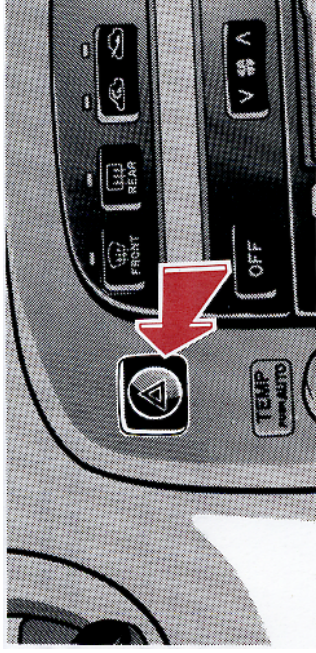

To turn on the emergency flashers, push the switch.

All the turn signal lights will flash. The emergency flashers will work with the engine running or off and with or without the ignition key.



Turn on the emergency flashers to warn other drivers if you must stop your vehicle where it might be a traffic hazard.


Always pull your vehicle as far off the road as possible.

The turn signal light switch will not work when the emergency flashers are in operation.


**NOTICE:**

**To prevent the battery from being discharged, do not leave the switch on for a long period when the engine is not running.**

### SEAT HEATER SWITCHES

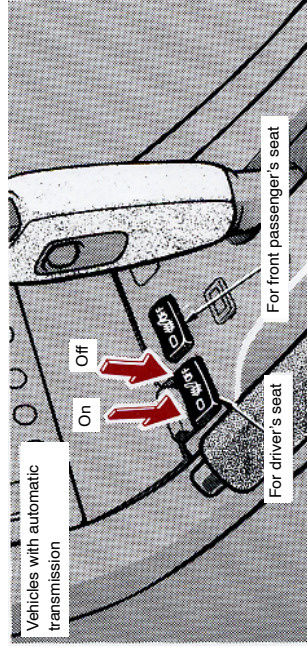

### SWITCHES

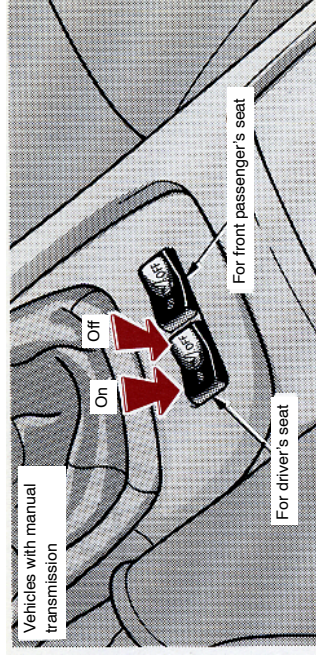

The seat heater has two switches. Push these switches on the left side to turn the respective seat heater on, and push the switches on the right side to turn them off.

The seat heater can only be used with the ignition key in the "ON" position.

**NOTICE:**

**To prevent the battery from being discharged, turn the switches on only when the engine is running.**