



*moving forward ▶*

# ***PRIUS***

POWERED  
BY



*2008  
Quick Reference Guide*

# 2008 Prius

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in the vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of the vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Prius.

## **! A word about safe vehicle operations**

**This *Quick Reference Guide* is not a full description of Prius operations. Every Prius owner should review the *Owner's Manual* that accompanies this vehicle.**

**Pay special attention to the boxed information highlighted in yellow throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.**

**All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.**

# INDEX

Item	Page no.
<b>BASIC HYBRID VEHICLE OPERATION</b>	
Hybrid Synergy Drive System	2
Keyless entry	6
Key fob	3
Parking & turning OFF the Hybrid System	9
Shifting	8
Smart Key system	4-5
<b>Smart Key unlock functions<sup>1</sup></b>	<b>5</b>
Turning the Hybrid System ON	7
<b>OVERVIEW</b>	
Engine maintenance	15
Fuel tank door opener and cap	14
Hood release	15
Indicator symbols	12-13
Instrument cluster	12
Instrument panel	10-11
Light control-Instrument panel	14
Rear hatch	14
<b>FEATURES/OPERATIONS</b>	
Air Conditioning/Heating	20-21
Audio	22-23
Clock	25
Cruise control	21
Cup and bottle holders	25
Garage door opener (HomeLink <sup>®</sup> ) <sup>2</sup>	17
Lights & turn signals	16
Luggage storage box	24
Parking brake	25
Power outlets	25
Seat adjustments-Front	18
Seat adjustments-Rear	18
Seats-Head restraints	18
Telephone controls (Bluetooth <sup>®</sup> )	24
Tilt steering wheel	19
Window wipers & washers	17
Windows	19
<b>SAFETY AND EMERGENCY FEATURES</b>	
Door locks	26
Doors-Child safety locks	26
Emergency flashers	27
Jump starting	28
Rear air vent	27
Seat belts	26
Seat belts-Shoulder belt anchor	26
Spare tire & tools	29
Tire Pressure Warning System	27

<sup>1</sup> Programmable by customer. For dealer-programmable features, please visit your Toyota dealer.

<sup>2</sup> HomeLink<sup>®</sup> is a registered trademark of Johnson Controls, Inc.

# BASIC HYBRID VEHICLE OPERATION

## Hybrid Synergy Drive System

The Hybrid Synergy Drive System utilizes a computer controlled gasoline engine and electric motor to provide the most efficient combination of power for the vehicle. To conserve energy, when the brakes are applied, braking force generates electricity which is then sent to the traction battery. In addition, the engine shuts off when the vehicle is stopped. The benefits are better fuel economy, reduced vehicle emissions and improved performance.



***Note: Fuel consumption and energy information of the Hybrid System are shown on the multi-information display. Refer to this screen for important driving information and feedback to maximize energy use/creation and conserve fuel.***

### Tips for improved fuel economy

- Ensure tire pressures are maintained at levels specified in the *Owner's Manual*.
- If possible, link trips to reduce engine cold starts.
- Avoid driving at speeds that are higher than necessary, especially on the highway.
- When possible, avoid sudden stops to maximize regenerative braking energy.
- Minimize use of the Air Conditioning.

Refer to the *Owner's Manual* for more details.


## Key fob

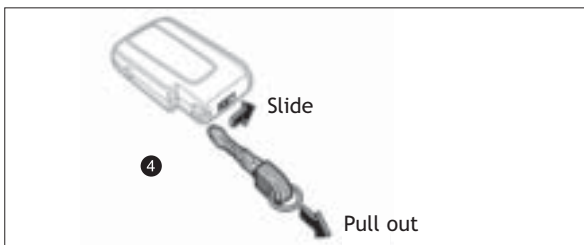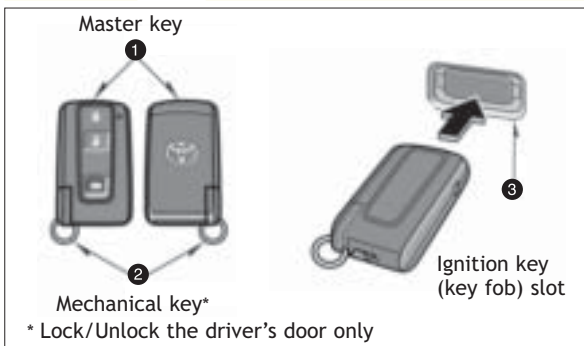

- 1 Master key Ignition key & wireless remote.
- 2 Mechanical key Fits into master key and can be removed to manually lock/unlock driver door only.
- 3 Ignition key slot When inserting, push completely in. When removing, gently pull; key will be pushed out by a spring. **DO NOT FORCE THE KEY.** If it cannot be removed, push it all the way in again, then pull it out.
- 4 To remove or replace mechanical key Slide the lock knob in the direction of the arrow.


# BASIC HYBRID VEHICLE OPERATION

## Smart Key system (if equipped)

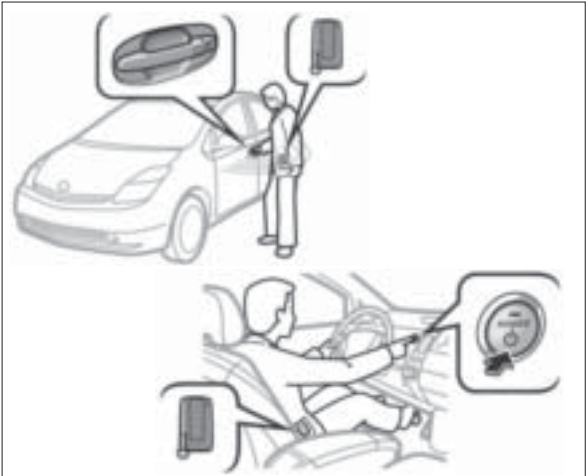


Carrying a Smart Key allows the vehicle to be locked, unlocked and the Hybrid System engaged without handling the key.

### Locking operation

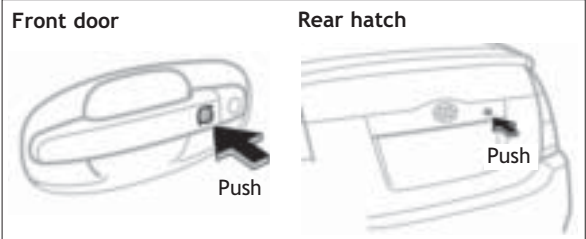


### Unlocking operation

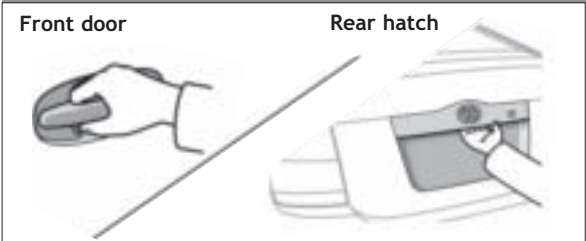

**NOTE:** After unlocking, if a door is not opened within 30 seconds, all doors will relock for safety. Refer to your *Owner's Manual* and the following section of this guide for Smart Key unlocking programmable options.

## Smart Key system cancel switch

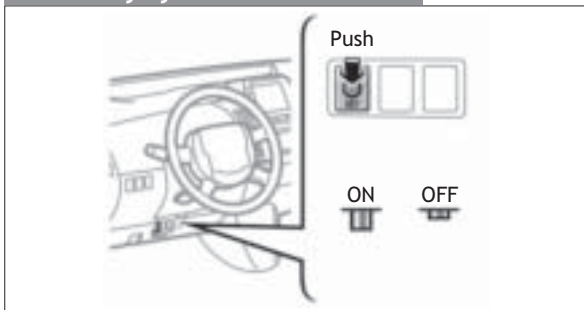

**NOTE:** To conserve battery power, turn the Smart Key system “OFF” when not using the vehicle for prolonged periods of time. For more battery saving information, refer to the *Owner’s Manual* for more details.

## Smart Key unlock functions (if equipped)

The Smart Key unlocking function can be programmed to operate in three different modes when Smart Key is activated. In all modes, grasping the front passenger door handle will unlock all doors.


- To unlock driver side door only, grasp driver side handle.
- To unlock all doors, grasp any door handle except rear doors.
- To unlock driver side door or hatch independently, grasp the handle.

Refer to the *Owner’s Manual* for more information on this feature, and how to change modes.


# BASIC HYBRID VEHICLE OPERATION

## Keyless entry

### Locking operation

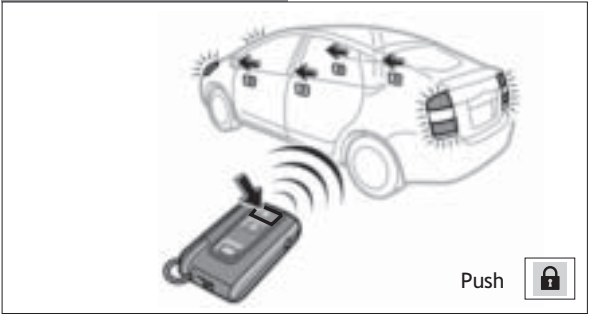


### Unlocking operation

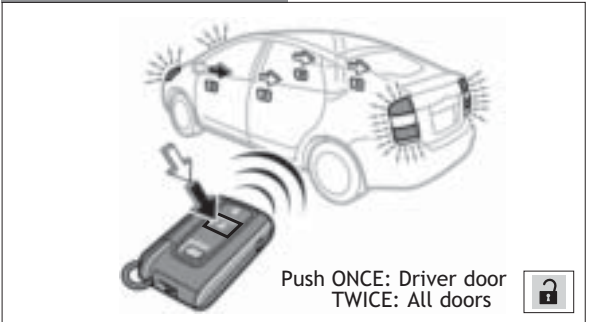

**NOTE:** After unlocking, if a door is not opened within 30 seconds, all doors will relock for safety.


### Panic button

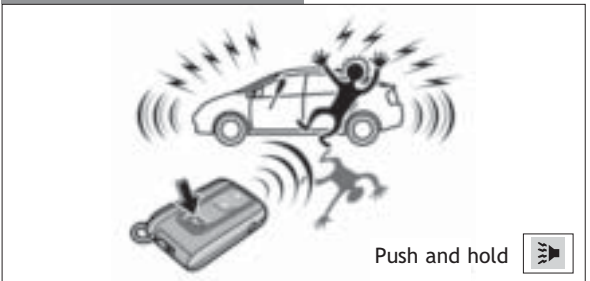



## Turning the Hybrid System ON

### Start function

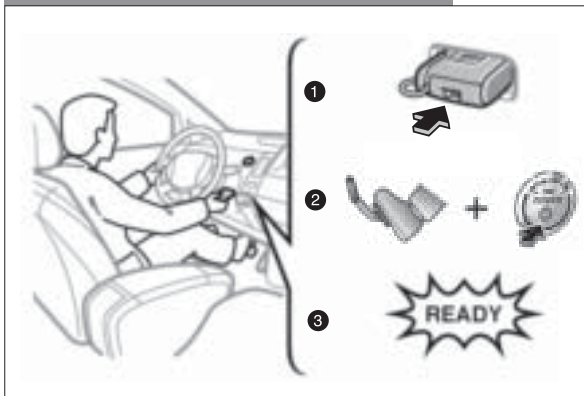


- ① Insert key.\*
- ② Depress the brake pedal and push the "POWER" button briefly and firmly.
- ③ The "READY" light will blink. After a few seconds, when the light remains ON and a beep sounds, you may begin driving.

**Note:** The brake pedal must be depressed to turn the Hybrid System on.


\* It is not necessary to insert the ignition key (key fob) if Smart Key system is installed and activated.

### Changing operation modes

Pressing "POWER" without depressing the brake pedal while the Hybrid System is OFF will change the operation mode in succession from:

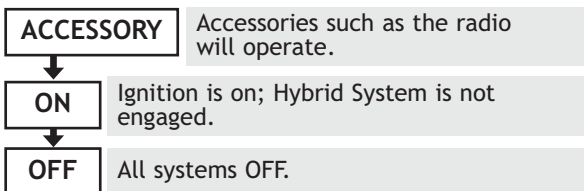

## Shifting

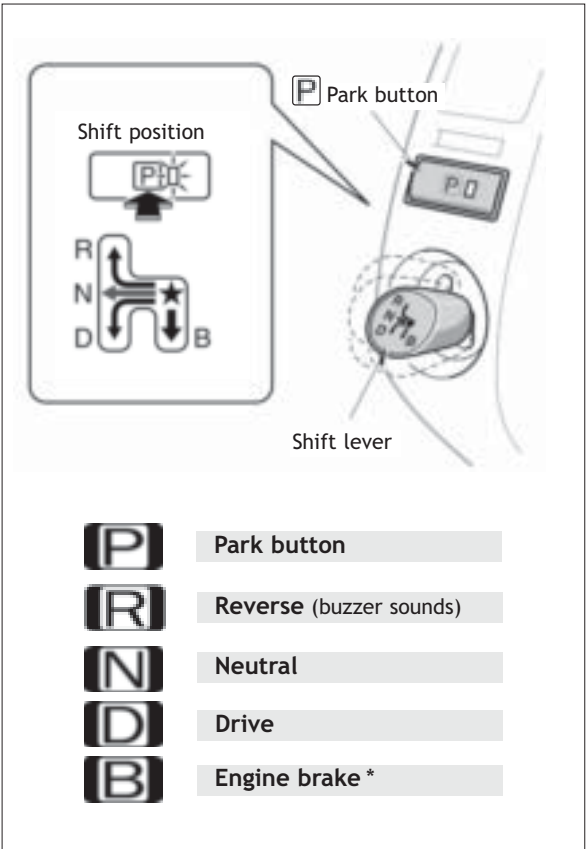

Brake pedal must be depressed when shifting to or from the **P** Park position. If brake is not applied, a beep will sound and the vehicle cannot be shifted.

**NOTE:** The shift lever will always return to its original position after shifting. **ALWAYS CONFIRM SHIFT POSITION BY CHECKING INDICATOR SYMBOLS ON THE INSTRUMENT CLUSTER.**

\* The engine brake is the equivalent of downshifting. Shift to "B" when engine braking is desired (i.e. downhill driving, coasting to a stop, etc.).

## Parking & turning OFF the Hybrid System

1



2



3



4



- 1 When the vehicle is at a complete stop, keep brake pedal depressed and push **P** Park button above the shift lever.
- 2 Push the "POWER" button to turn off the system.
- 3 Fully depress the parking brake.
- 4 Remove the key fob if inserted.\*

**WARNING:** If the "POWER" button is held for longer than three seconds while the vehicle is moving, the Hybrid System will shut off.


\* It is not necessary to insert the ignition key (key fob) if Smart Key system is installed and activated.

### Information



In some instances when the engine starts, and/or on a short trip after the engine is stopped, the engine water pump may continue operating for a short time. This is a standard operation of the vehicle to ensure optimum performance and shouldn't be a concern.


# OVERVIEW

## Instrument panel

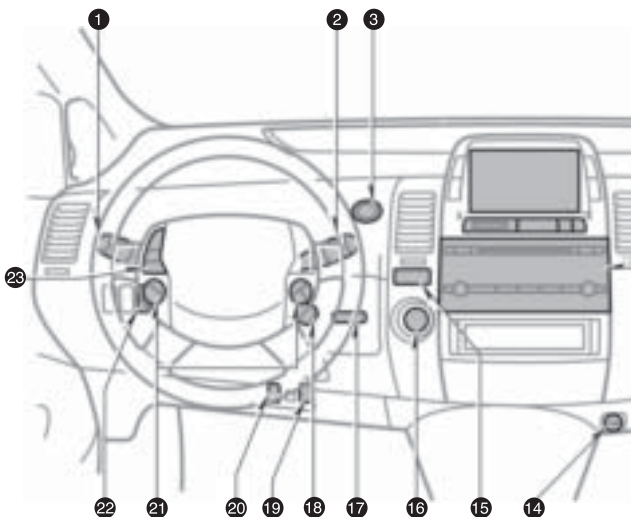

- ① Headlight, turn signal and front fog light<sup>1</sup> controls
- ② Wiper and washer controls
- ③ "POWER" button
- ④ Clock
- ⑤ "AUDIO" switch (multi-information display control)
- ⑥ "CLIMATE" switch (multi-information display control)
- ⑦ Multi-information display
- ⑧ "DISPLAY" switch (multi-information display control)
- ⑨ "INFO" switch (multi-information display control)
- ⑩ Mph or km/h button
- ⑪ Trip meter reset
- ⑫ Emergency flasher button

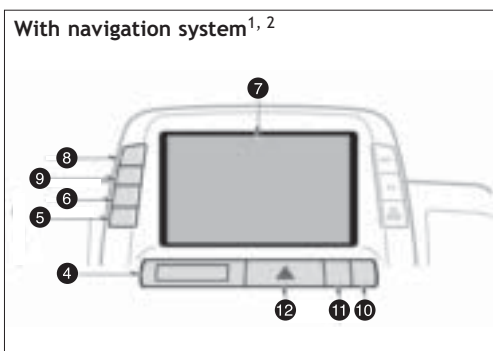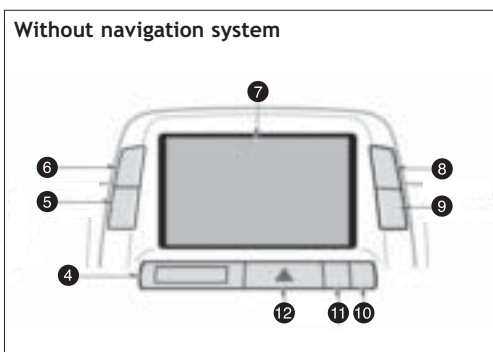


- 13 Audio system
- 14 12V DC Power outlet
- 15  Park button
- 16 Electronic shift lever
- 17 Ignition key (key fob) slot
- 18 Cruise control<sup>1</sup>
- 19 Tire Pressure Warning System reset
- 20 Smart Key system cancel<sup>1</sup>
- 21 Steering wheel climate control
- 22 Instrument panel light control
- 23 Steering wheel audio control

<sup>1</sup> If equipped

<sup>2</sup> For details, refer to the *Navigation System Owner's Manual*.

# OVERVIEW

## Instrument cluster

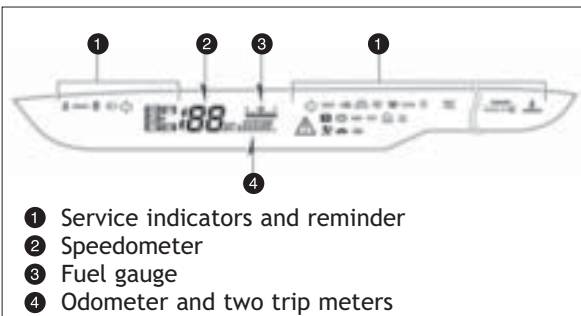

 

















## Indicator symbols

<b>BRAKE</b>	Brake system warning <sup>1</sup>
	Driver seat belt reminder <sup>1</sup> (alarm will sound if speed is over 12 mph)
	Front passenger seat belt reminder <sup>1</sup> (alarm will sound if speed is over 12 mph)
	Charging system warning <sup>1</sup>
	Malfunction/Check Engine indicator <sup>1</sup>
	Low engine oil pressure warning <sup>1</sup>
	Low fuel level indicator <sup>1</sup>
	Master warning <sup>1</sup>
	High coolant temperature warning <sup>1</sup>
	Open door warning <sup>1</sup>
	Airbag SRS warning <sup>1</sup>
	Low Tire Pressure Warning <sup>1</sup>
<b>VSC</b>	Vehicle Stability Control warning <sup>1</sup>
<b>MAINT REQD</b>	Engine oil replacement reminder <sup>1</sup>
	Traction battery warning <sup>1</sup>

<sup>1</sup> For details, refer to “Service reminder indicators and warning buzzers – Instrument cluster” Section 5-2, 2008 Owner’s Manual.


<sup>2</sup> If this light flashes, see “Cruise control” Section 2-4, 2008 Owner’s Manual.


	<b>PS</b> Electric power steering system warning <sup>1</sup>
	Smart Key system warning <sup>1</sup>
	Turn signal indicator
	Headlight high beam indicator
	Headlight indicator
	Slip indicator
	Automatic headlight leveling system warning <sup>1</sup>
	Cruise control indicator <sup>2</sup>
	Hybrid System warning <sup>1</sup>
	Running mode position indicator <sup>3</sup>
	Driving ready light
	Automatic Air Conditioner indicator
	Recirculate mode indicator
	Windshield airflow indicator
	Rear window and outside rearview mirror defoggers indicator
	Hybrid vehicle immobilizer/Theft deterrent system indicator
	Front passenger occupant classification indicator
	Anti-lock Brake System warning <sup>1</sup>

<sup>3</sup> For details, refer to “Transmission” Section 2-1, 2008 Owner’s Manual.

# OVERVIEW


## Fuel tank door opener and cap

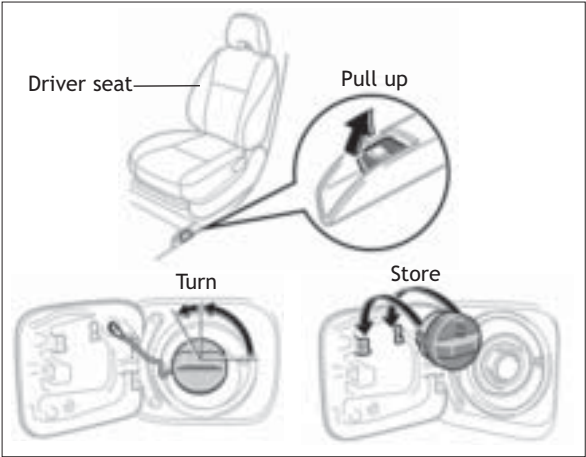

**NOTE:** Tighten until one click is heard. If the cap is not tightened enough, Check Engine “” indicator may illuminate.


**NOTE: MAINTAIN GASOLINE IN THE TANK AT ALL TIMES. SERIOUS DAMAGE TO THE HYBRID SYSTEM CAN OCCUR IF THE VEHICLE RUNS OUT OF GASOLINE.**

## Rear hatch

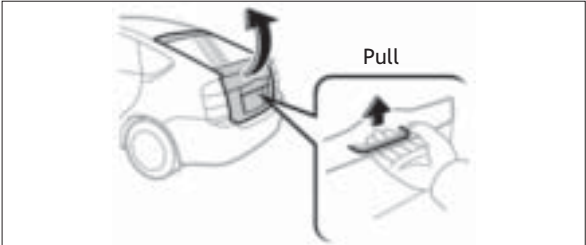


To open the rear hatch, grasp the handle and pull up.

## Light control-Instrument panel

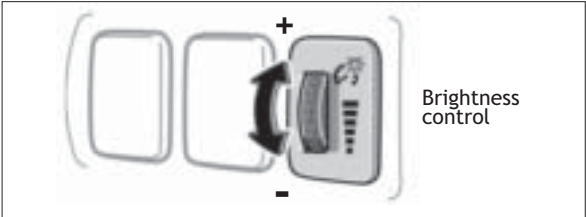




## Hood release

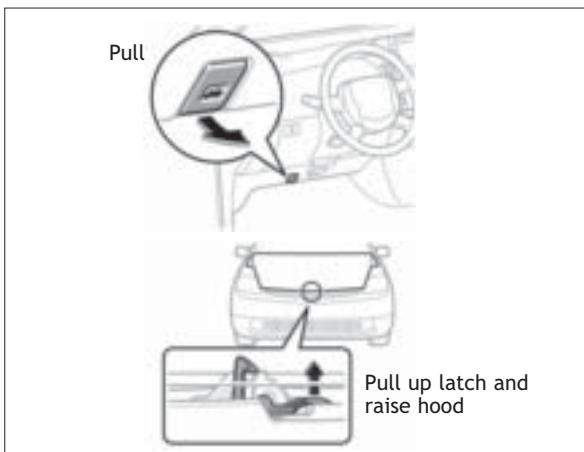

## Engine maintenance

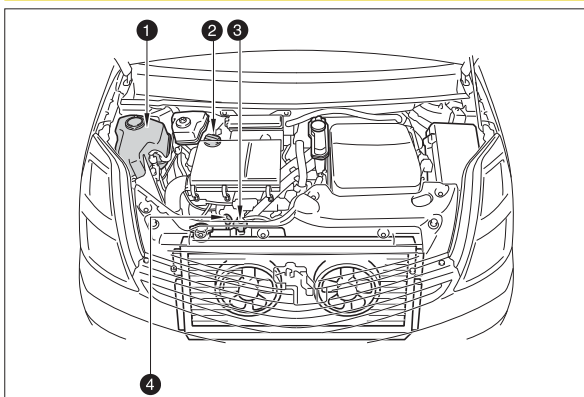


- ① Windshield washer fluid tank
- ② Engine oil filler cap
- ③ Engine coolant reservoir
- ④ Engine oil level dipstick

**Note:** Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Owner's Warranty Information Booklet," "Scheduled Maintenance Guide" or "Owner's Manual Supplement."

# FEATURES/OPERATIONS

## Lights & turn signals


### Headlights

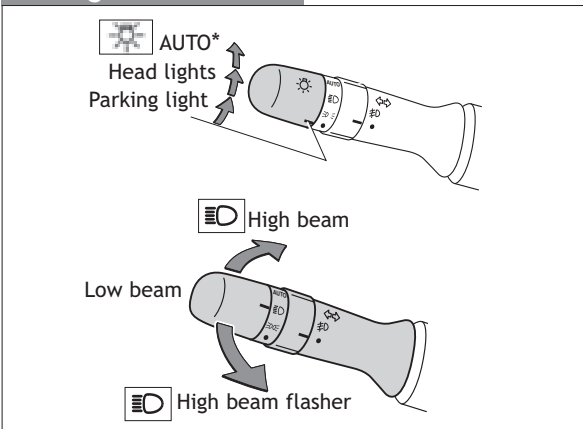

-**Automatic light cutoff system** Automatically turns off lights when the driver's door is opened with the Hybrid System "OFF."


\* If equipped

### Front fog lights (if equipped)

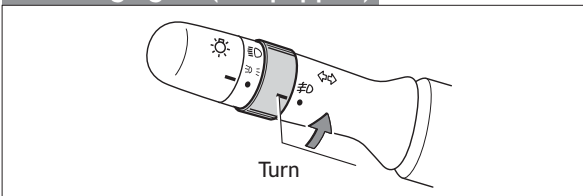


Front fog lights come on only when the headlights are on low beam.

### Turn signals

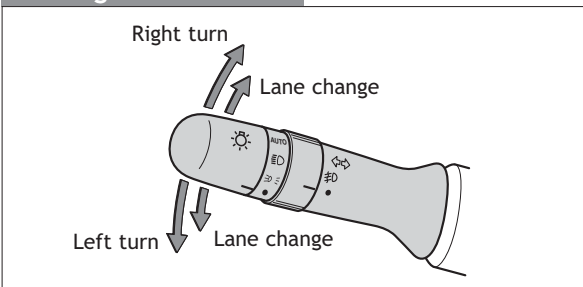


## Window wipers & washers


### Front

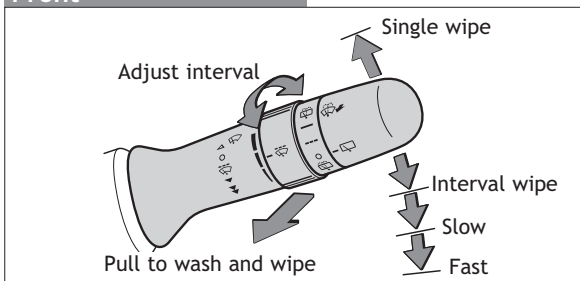

### Rear

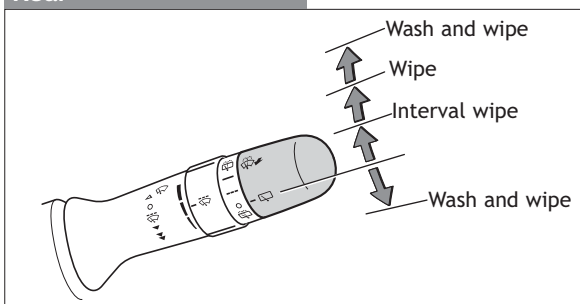

## Garage door opener (HomeLink®) (if equipped)

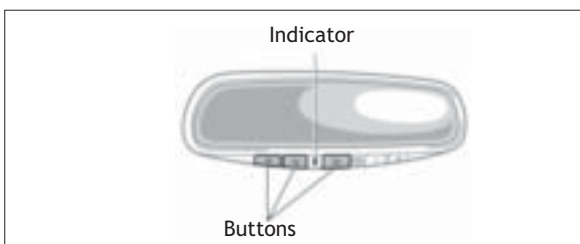

Garage door openers manufactured under license from HomeLink®\* can be programmed to operate garage doors, estate gates, security lighting, etc.


Refer to the *Owner's Manual* for more details.

For programming assistance, contact the Toyota Customer Experience Center at 1-800-331-4331, or visit <http://www.homelink.com>


\* HomeLink® is a registered trademark of Johnson Controls, Inc.

# FEATURES/OPERATIONS


## Seat adjustments-Front

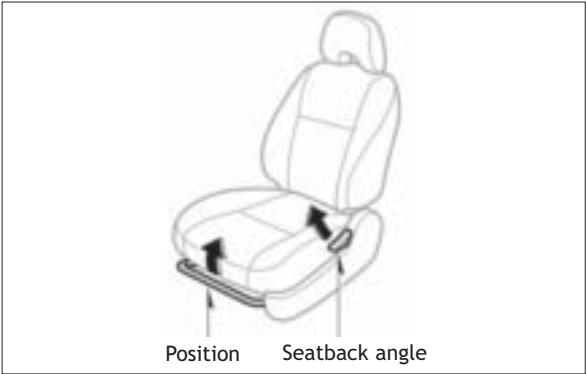


## Seats-Head restraints

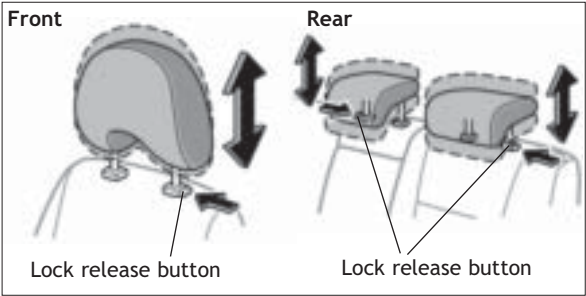

## Seat adjustments-Rear

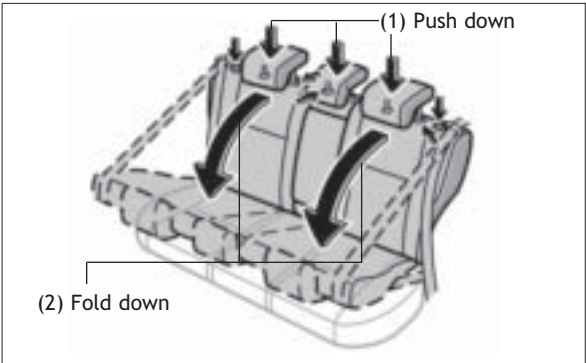


## Tilt steering wheel

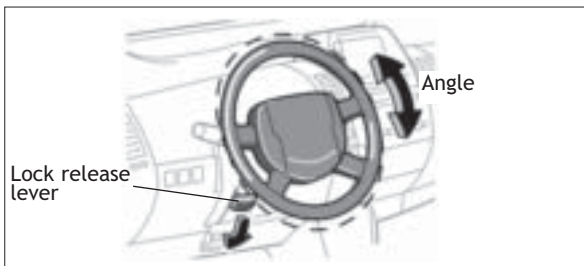

Hold wheel, push lever down, set angle and return lever.

**Note:** *Do not attempt to adjust while the vehicle is in motion.*

## Windows

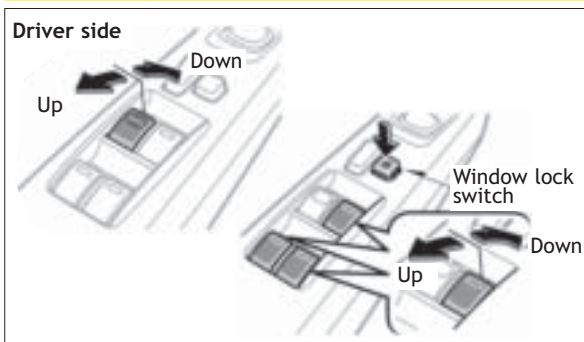

### Window operation


**Automatic operation (driver side only)** Push the switch completely down or pull it completely up and release to fully open or close. To stop window midway, lightly push the switch in the opposite direction.

**Window lock switch** Deactivates all passenger windows. Driver's window remains operable.


**NOTE:** If 12V battery is disconnected, the window will need to be reinitialized. Refer to the *Owner's Manual* for more details.

## Air Conditioning/Heating

### Type 1 functions

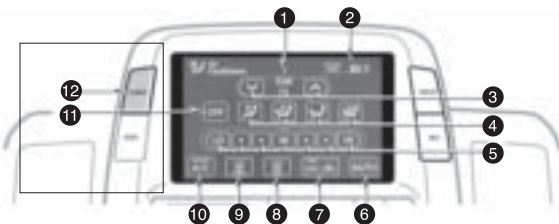

### Type 2 functions

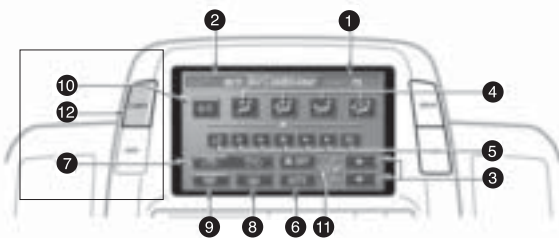


### With navigation system<sup>1</sup>



- ① Passenger compartment temperature
- ② Outside temperature
- ③ Temperature
- ④ Airflow vent
- ⑤ Fan speed
- ⑥ Automatic climate control ON
- ⑦ Fresh or recirculated cabin air
- ⑧ Rear window and outside rearview mirror defogger
- ⑨ Windshield airflow
- ⑩ Air Conditioning ON/OFF
- ⑪ Climate control OFF
- ⑫ Display the operation screen<sup>1</sup>

<sup>1</sup> For details, refer to the "Navigation System Owner's Manual."


## Steering wheel switches

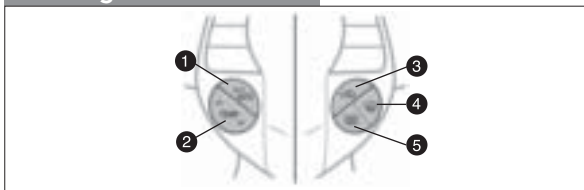


- ❶ Auto A/C ON/OFF
- ❷ Temperature selector
- ❸ Air intake selector
- ❹ Windshield vent
- ❺ Rear window and outside rearview mirror defogger

## Cruise control (if equipped)

### Turning system ON/OFF

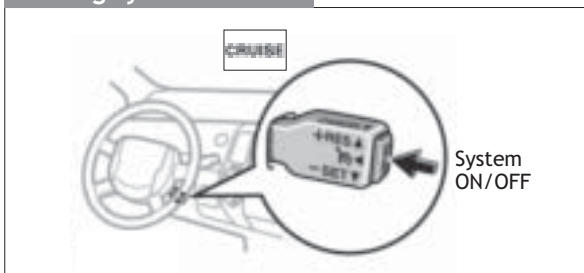

### Setting a speed


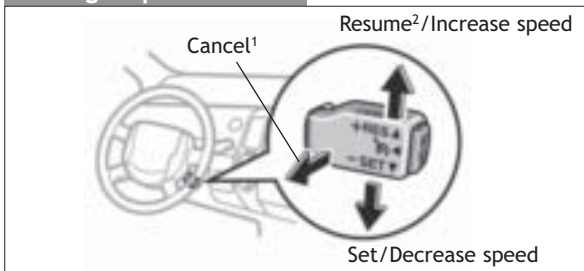


<sup>1</sup> The set speed may also be cancelled by depressing the brake pedal.

<sup>2</sup> If vehicle speed falls below 25 mph, the set speed will not be resumed.

# FEATURES/OPERATIONS

## Audio

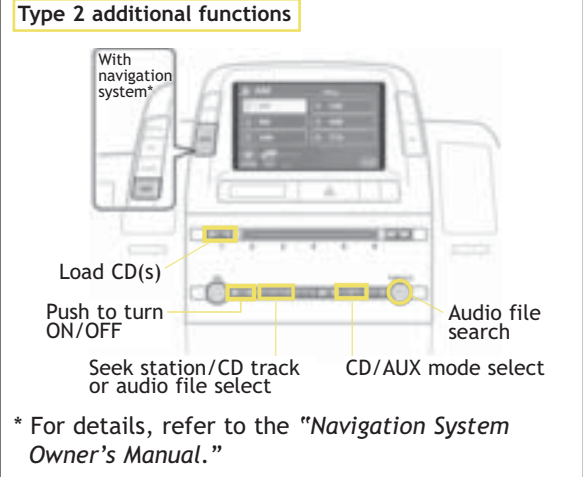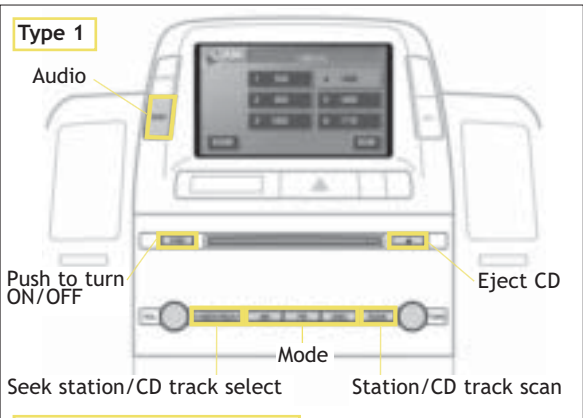

\* For details, refer to the "Navigation System Owner's Manual."

## Audio operation screen



## RADIO

**To preset a station** Tune in the desired station and touch a station selector icon (1-6) until you hear a beep.

**To scan for stations** Push "SCAN." Push again to hold selection.



## CD PLAYER

To scan tracks on a disc Touch "SCAN" icon on the display. Push again to hold selection.

### CD changer (Type 2 only)

-To load one disc Push "LOAD" and insert one disc.

-To load multiple discs Push and hold "LOAD" until you hear a beep. Insert one disc. Shutter will close and then re-open for next disc.

To select a file (MP3/WMA only) Turn "TUNE•FILE."

## Steering wheel switches



### 1 "- +"

Volume control

### 2 "MODE"

Push to turn audio ON and select an audio mode.  
Push and hold to turn the audio system OFF.

### 3 " V ^ " switch

**In radio mode** Push to select a preset station; push and hold to seek the next strong station.

**In CD mode** Push to skip up or down to next/previous track.


## AUX audio jack (if equipped)




By inserting a mini plug into the AUX audio jack, you can listen to music from a portable audio device through the vehicle's speaker system.

## FEATURES/OPERATIONS

### Luggage storage box

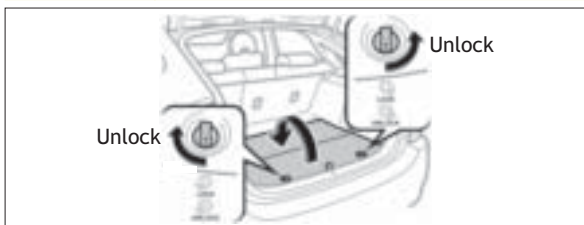

### Telephone controls (Bluetooth®) (if equipped)

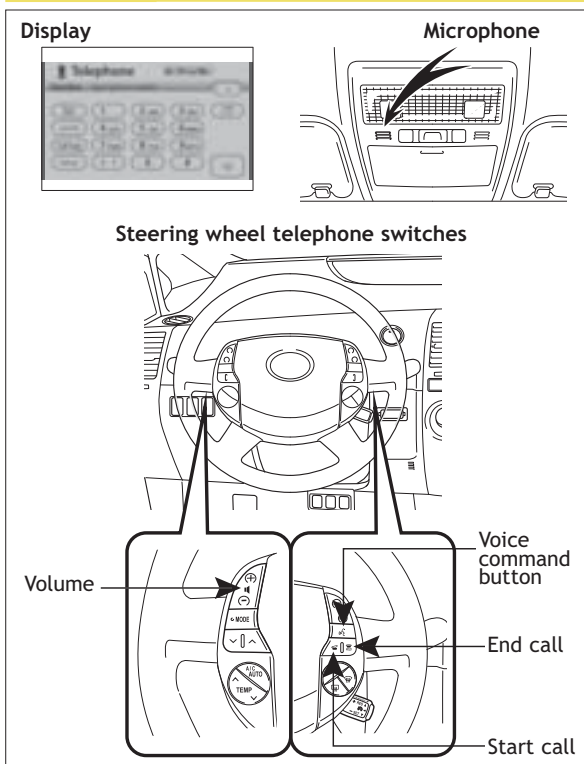

Bluetooth® technology allows you to place or receive calls without taking your hands from the steering wheel or using a cable to connect the telephone and the system.

Refer to "Hands-free phone system (for cellular phone)," Section 3-4 in the *Owner's Manual* for more details.

## Cup and bottle holders

Cup holder-Front



Cup holder-Rear



Bottle holder

Front door



## Power outlets

Instrument panel (12V)



Center console box (12V)



The Hybrid System must be in "ACC" or "IG-ON."


## Parking brake

Set: Depress  
Release: Depress again




**BRAKE**

## Clock

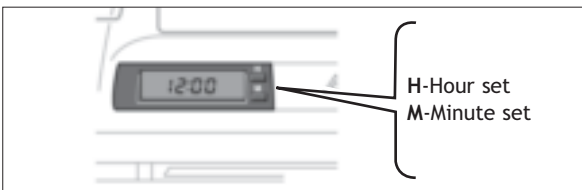


# SAFETY AND EMERGENCY FEATURES

## Door locks

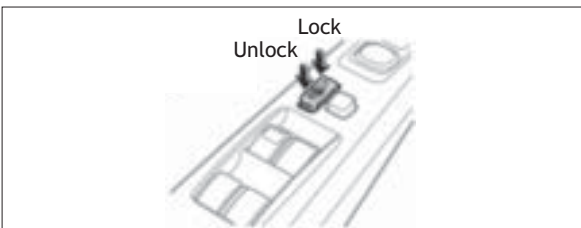


## Doors-Child safety locks

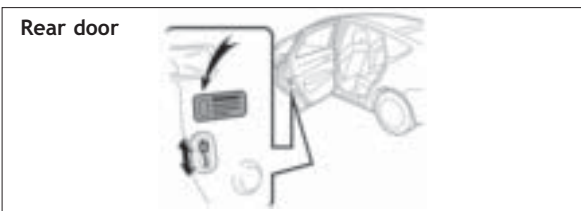

Moving the lever to "LOCK" will allow the door to be opened only from the outside.


## Seat belts

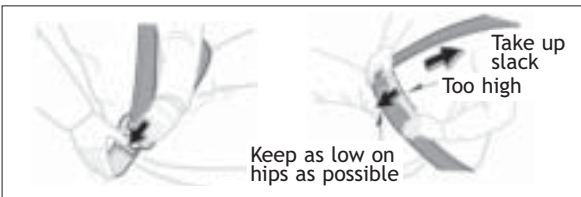


If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

## Seat belts-Shoulder belt anchor

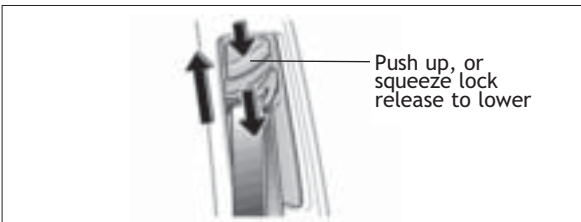

## Emergency flashers

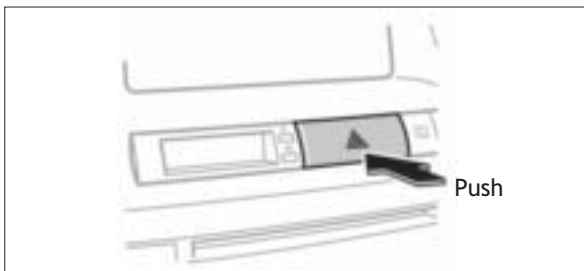



## Rear air vent



**Note:** The air vent on the right side of the rear seatback is designed to assist in cooling the Hybrid vehicle battery. **DO NOT BLOCK OR COVER THIS VENT**, as it may cause overheating, resulting in reduced vehicle performance.

## Tire Pressure Warning System

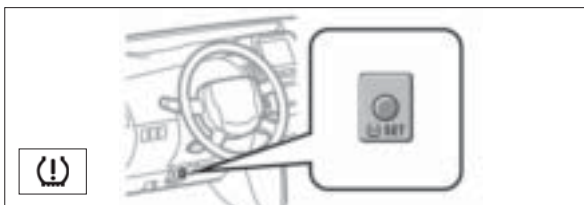


If tire pressure becomes critically low on any of the tires (excluding spare), indicator illuminates. Pushing “ SET” button should not turn off the light. Correctly adjusting tire inflation will turn off the light after a few minutes. After replacing/rotating tire or wheels, the system must be initialized.

Refer to the *Owner's Manual* for details on system reset initialization.

# SAFETY AND EMERGENCY FEATURES


## Jump starting

### Jump start terminal

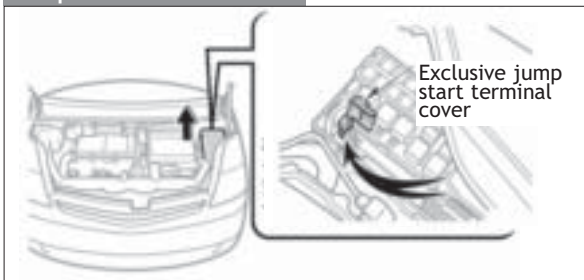

The jump start terminal is in the fuse box. To access the terminal, open the fuse block cover and the jump start terminal cover.

### Connecting jumper cables

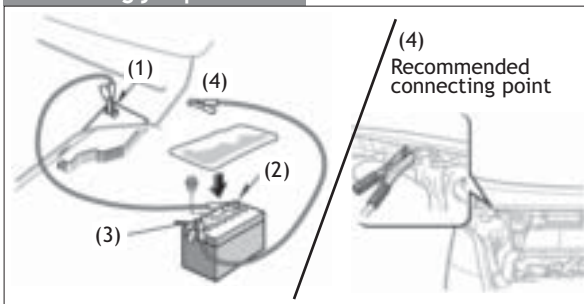


- (1) Connect positive (red) jumper cable to the jump start terminal.
- (2) Connect positive (red) jumper cable to the positive (+) terminal on the booster battery.
- (3) Connect negative (black) jumper cable to the negative (-) terminal on the booster battery.
- (4) Connect negative (black) jumper cable to the recommended connecting point of the vehicle with the discharged battery.
- (5) Depress brake pedal, and press "POWER" button to start the vehicle.


Refer to the "Owner's Manual" for more details.

## Spare tire & tools

### Tool location

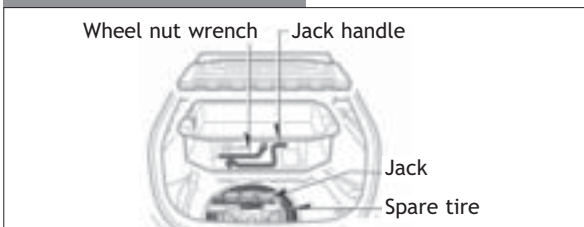

### Removing the spare tire

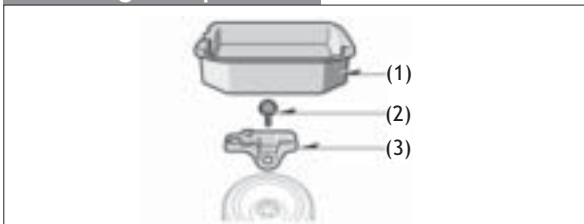

- (1) Remove the luggage storage box.
- (2) Loosen the bolt and remove it.
- (3) Remove the jack box.

Refer to the “*Owner’s Manual*” for tire changing and jack positioning procedures.



Customer Experience Center  
1-800-331-4331