

NAVIGATION
SYSTEM WITH
ENTUNE
2 0 1 2



QUICK REFERENCE
GUIDE

LIMITATIONS OF THIS QUICK REFERENCE GUIDE

This Quick Reference Guide is designed to provide information on the important key features and controls of Entune (apps and data services), audio, bluetooth and navigation. The Quick Reference Guide is not intended as a substitute for the Owner's Manual. We strongly encourage you to review the Owner's Manual, this Quick Reference Guide and visit www.toyota.com/entune so that you will have a better understanding of all your vehicle's features and controls.

TABLE OF CONTENTS

CUSTOMER SUPPORT	1
ENTUNE™- NEW CUSTOMER REGISTRATION	2
CONNECT A BLUETOOTH PHONE	4
CONNECT A PHONE FOR BLUETOOTH AUDIO	5
CONNECT A SMARTPHONE FOR INTERNET	6
BOOKMARKING	7
ENTER DESTINATION BY ADDRESS	8
SET HOME	9
ENTER POINT OF INTEREST BY NAME	10
ENTER POINT OF INTEREST BY CATEGORY	12
ADDITIONAL NAVIGATION FEATURES	14
VOICE RECOGNITION ADVANCED ONE SHOT ENTRY	16

CUSTOMER SUPPORT

- www.toyota.com/entune
- www.toyota.com/owners
- Toyota Customer Experience Center at 1-800-331-4331

entune™ - NEW CUSTOMER REGISTRATION

PLEASE READ

ENTUNE

In order to access Entune applications from your vehicle's touch screen, you must use a computer to register for Entune. Visit www.toyota.com/entune to learn all about Entune features and use the link to register. After you register use your cell phone to download the Entune app from the appropriate app store.

The available Entune system is a collection of popular mobile applications and data services integrated with select Toyota vehicles. Entune includes three years of complimentary access to apps and services delivered via most smart phones and some feature phones. After three years, an access charge will apply. Depending on the details of your data-enabled phone contract, **data usage fees may apply**. Some applications may require additional registration. See www.toyota.com/entune.

For additional information on Entune and to check phone compatibility, visit www.toyota.com/entune or call the Toyota Customer Experience Center at 1-800-331-4331.

PHONE COMPATIBILITY

- To check phone compatibility refer to www.toyota.com/entune or scan the ToyoTag (message and data rates may apply).
- You do not need a smartphone to use Bluetooth® hands-free, Bluetooth audio or the navigation system. For Bluetooth phone pairing, refer to page 4.

ToyoTag



entune™ - **NEW CUSTOMER REGISTRATION**

GETTING STARTED WITH ENTUNE

step 1 From a computer, access www.toyota.com/entune

step 2 Click on the "Getting Started" tab located on the top of the page

step 3 Click on "How Do I Use Entune?"

step 4 Follow the directions to ensure you have a compatible phone and begin creating your account


Quick Tip - Your VIN can be found on your vehicle registration. The VIN is also located on the top of the instrument panel near the front of the driver door, and can easily be viewed from outside the vehicle.

DOWNLOADING ENTUNE APP TO YOUR PHONE


Using your cell phone, connect to your app store (iTunes App store, Blackberry App World, Android Market) and search for Entune and download.

CONNECT A BLUETOOTH PHONE


To connect your phone follow the steps below. Please refer to www.toyota.com/entune for more information.
iPhone users: connect iPhone to the USB connector (refer to owner's manual for USB connector location).

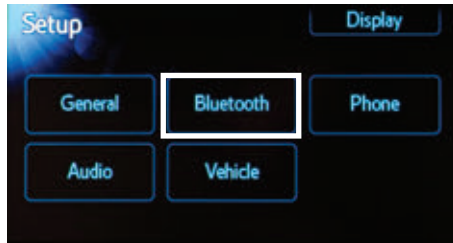

step 1 Press **SETUP** on the faceplate followed by **Bluetooth**.

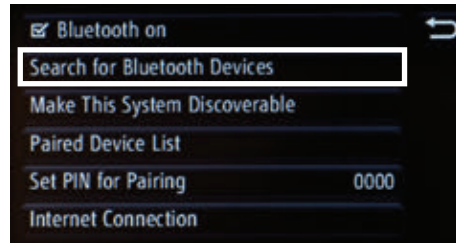

step 2 Touch **Search for Bluetooth Devices**. Verify that the Bluetooth feature on the phone is ON and is in discoverable mode. The specific process for this varies from phone to phone. Please refer to the cell phone manufacturer's user guide for pairing procedures.

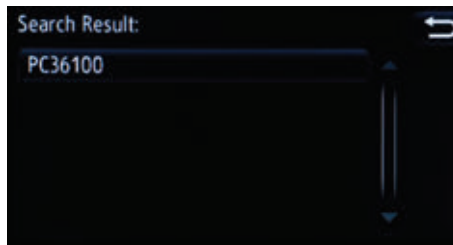


step 3 Touch the button identifying your phone. A pop-up message will direct you to start the pairing process on your phone. Follow any additional instruction shown on screen or phone.

Or, make the head-unit discoverable and pair from your phone: **PRESS SETUP > Bluetooth > Make This System Discoverable**


Depending on your phone compatibility it may not be necessary to connect individually for all functions. Please see paired devices screen: **PRESS SETUP > Bluetooth > Paired Device List**

CONNECT A PHONE FOR BLUETOOTH AUDIO


Depending on your phone compatibility it may not be necessary to connect individually for all functions.
Please see paired devices screen: **PRESS** **SETUP** > **Bluetooth** > **Paired Device List**

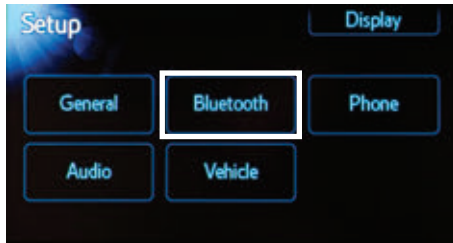


step 1 Press **SETUP** on the faceplate followed by **Bluetooth**.

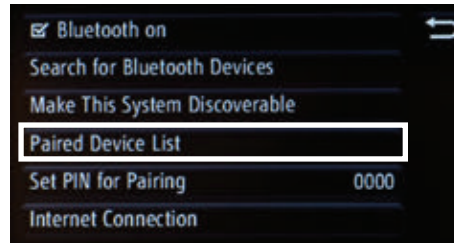

step 2 Touch **Paired Device List**.

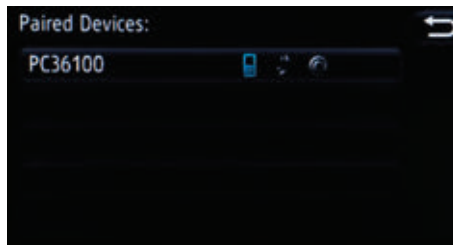

step 3 Touch the desired paired device.

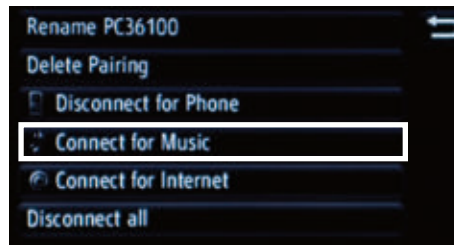

step 4 Touch **Connect for Music**.

CONNECT A SMARTPHONE FOR INTERNET


Depending on your phone compatibility it may not be necessary to connect individually for all functions. Please see paired devices screen: **PRESS SETUP > Bluetooth > Paired Device List**

In order to connect your smartphone and access Entune™ applications from your car's touch screen, you must **REGISTER AND DOWNLOAD THE ENTUNE APPLICATION FROM A COMPUTER**. Refer to page 2.


- Please ensure your phone is connected per instructions on page 4.
- To check phone compatibility refer to www.toyota.com/entune or scan the ToyoTag on page 2
- You do not need a smartphone to use Bluetooth® hands-free, Bluetooth audio or the navigation system.
- Depending on the details of your data-enabled phone contract, **data usage fees may apply**. Data can stream if connected, even if you aren't accessing APPS.

Quick Tip -


In order to connect for internet services, the Entune application on the mobile device must be open.

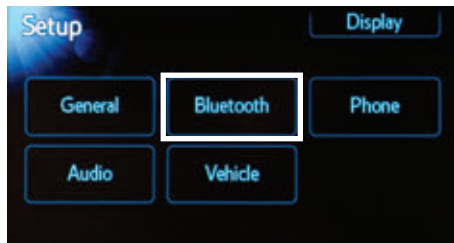


step 1 Press **SETUP** on the faceplate followed by **Bluetooth**

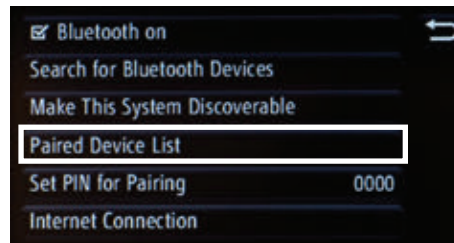

step 2 Touch **Paired Device List**

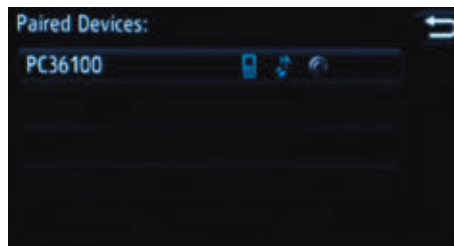


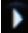
step 3 Touch the desired paired device.


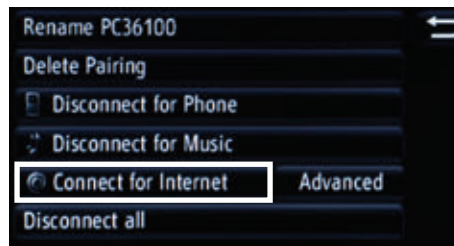





step 4 Touch **Connect for Internet**. Follow any additional instruction shown on screen or phone.

Quick Tip - Entune services use cell phone data plan. Charges may occur if plan roaming restrictions are exceeded. Using **Advanced** features may add additional charges from your service provider. See www.toyota.com/entune for further details.

BOOKMARKING

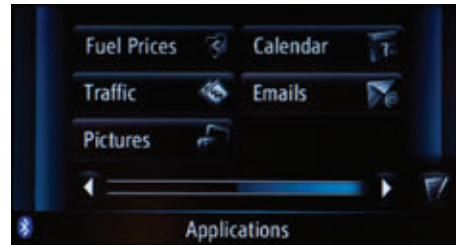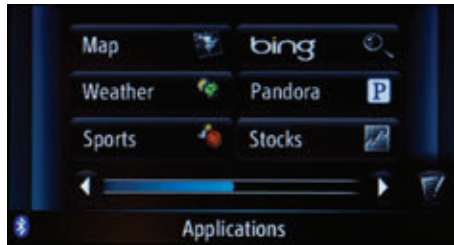Press **APPS** on the faceplate, followed by  and  to scroll through applications. Touch the desired application.

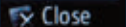


Quick Tip - An application is open when  is displayed on the left side of the name. Touching  in the lower right corner, followed by  will close an application.


Only APPS visible on the screen are available through Entune. Other APPS downloaded on your phone are not available through Entune.

BOOKMARKS

 Add favorite:



Delete favorite:

 


Add favorite:




Delete favorite:



 Add favorite:




Delete favorite:

 

Available APPS and functions are subject to change without notice. For updates, please refer to www.toyota.com/entune.


ENTER DESTINATION BY ADDRESS

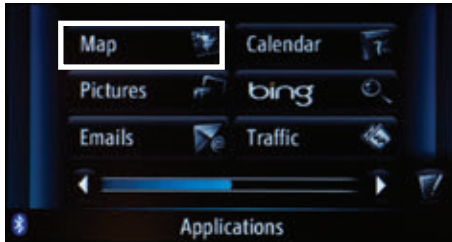


step 1 Press **APPS** on the faceplate followed by **Map**.




step 2 Touch **Dest**.

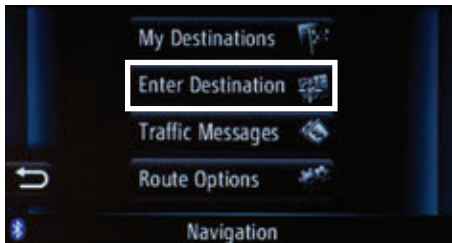

step 3 Touch **Enter Destination**.

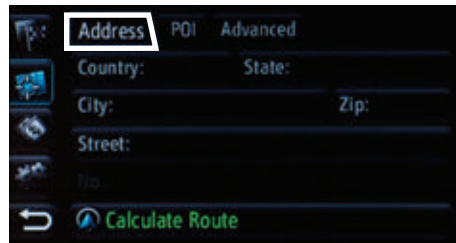

step 4 Touch **Address** if necessary.

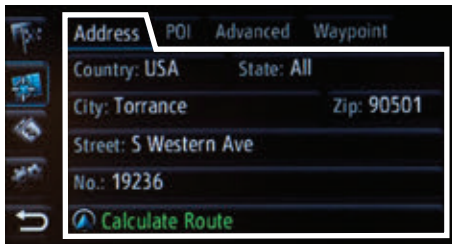

step 5 Touch each cell and input the information. See page 15 for keyboard layout. Touch **Calculate Route**.

Quick Tip - For multiple destinations use **Waypoint** after the initial destination is inputted.




step 6 Touch **Start** to begin route guidance.

Quick Tip - Select the desired avoidance criteria by touching **Avoid**.
- Select the desired route preferences by touching **Preferences**.

See page 14 for more details.

Press **voice icon** on the steering wheel to use voice recognition. Say: "Destination and the House No, Street, City, and State" in one shot. See page 16 for more details.


SET HOME

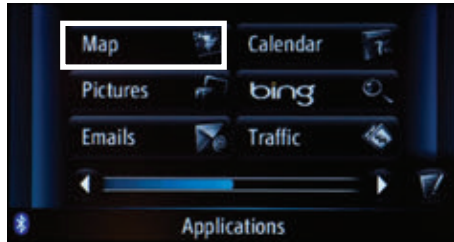


step 1 Press **APPS** on the faceplate followed by **Map**.



step 2 Touch **Dest**.

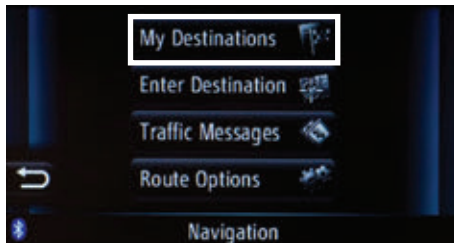


step 3 Touch **My Destinations**.

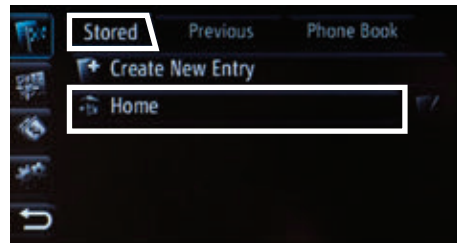


step 4 Touch **Stored** followed by **Home**.

Quick Tip - To change/edit a set home address, touch .

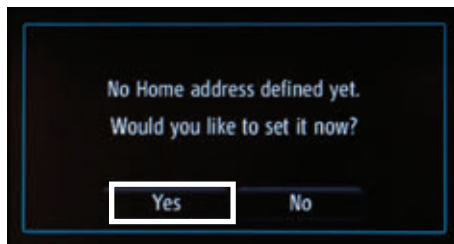


step 5 Touch **Yes**.

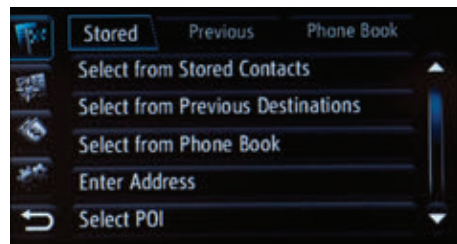

step 6 Touch the desired method to enter home address.

Tip - For security reasons, use a point close to your home instead of your actual home address.


ENTER POINT OF INTEREST BY NAME

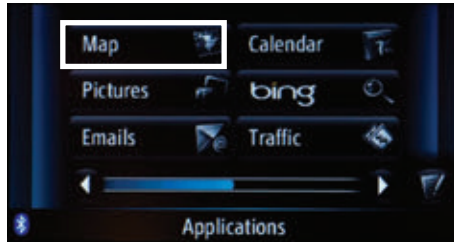


step 1 Press **APPS** on the faceplate followed by **Map**.




step 2 Touch **Dest**.

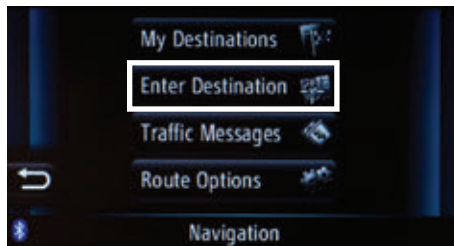

step 3 Touch **Enter Destination**.

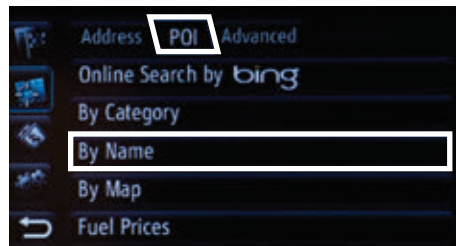

step 4 Touch **POI**, followed by **By Name**.

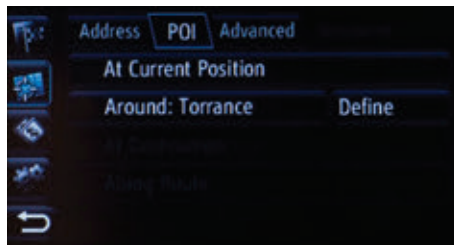

step 5 Touch the desired search area.




step 6 Input the POI name and touch **OK**.

Press  on the steering wheel to use voice recognition. Say: "Find next and the POI name" in one shot. See page 16 for more details.


ENTER POINT OF INTEREST BY NAME




step 7 Use ▲ or ▼ to scroll up or down.
Touch the desired destination.

Quick Tip - Touching  next to the POI name will display the map, address and telephone number.



step 8 Touch  to begin route guidance.


ENTER POINT OF INTEREST BY CATEGORY

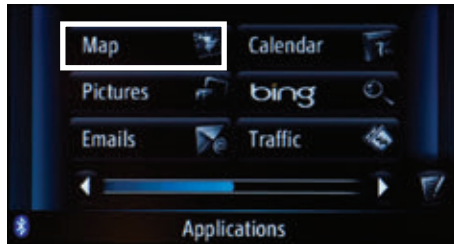


step 1 Press **APPS** on the faceplate followed by **Map**.




step 2 Touch **Dest**.

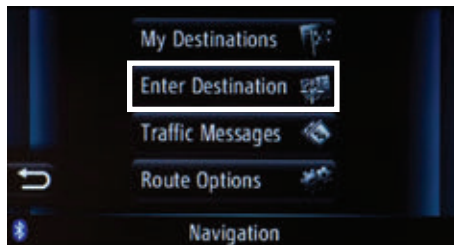


step 3 Touch **Enter Destination**.

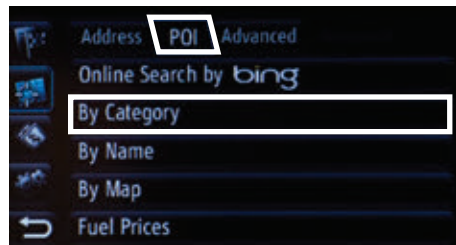

step 4 Touch **POI**, followed by **By Category**.

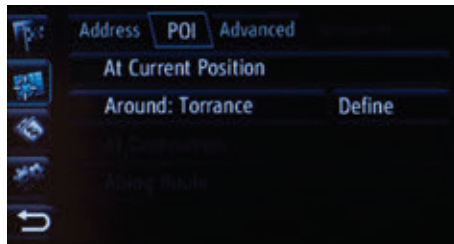


step 5 Touch the desired search area.

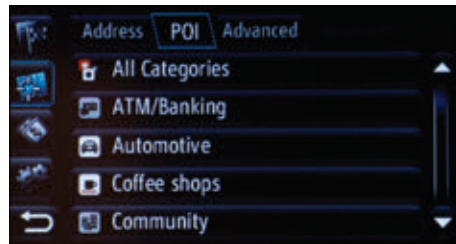


step 6 Use **▲** or **▼** to scroll up or down. Touch the desired category icon.


ENTER POINT OF INTEREST BY CATEGORY

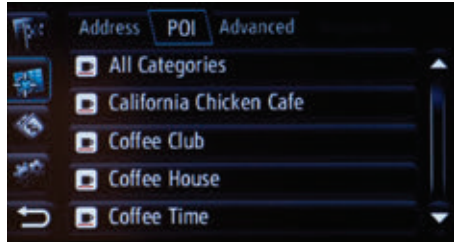

step 7 Touch the desired sub-category.

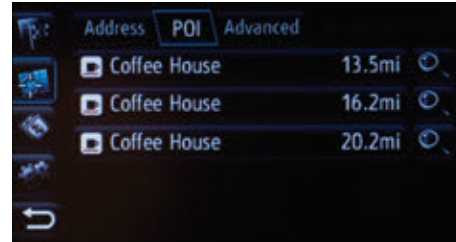

step 8 Touch the desired point of interest.


Quick Tip - Touching  next to the POI name will display the map, address and telephone number.




step 9 Touch to begin route guidance.

ADDITIONAL NAVIGATION FEATURES

ROUTE PREFERENCES

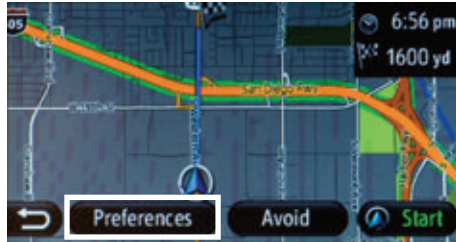


Once the address has been entered, select the route preferences.

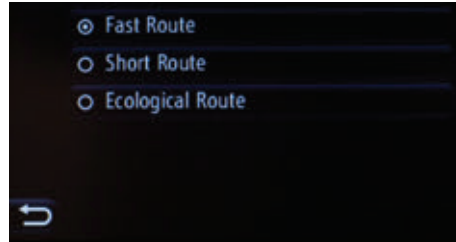


One of three routes may be chosen for the trip:
Fast- offers the shortest route by time.
Short- most direct based upon driven mileage.
Ecological- lowest fuel usage.

AVOIDANCE CRITERIA

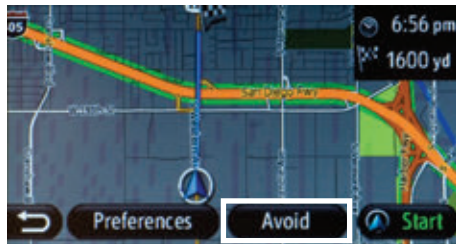


Once the address has been entered, select the avoidance criteria for the trip.

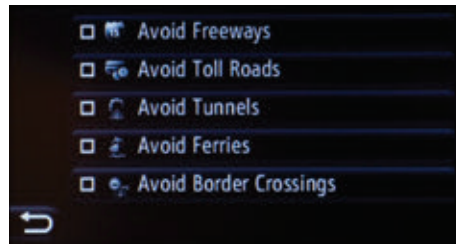

For example, if Avoid Toll Roads is checked, the system will route over non-toll roads which may take longer to reach the destination.

MAP LAYOUT




Touch  to select from three different screen viewing options.



ADDITIONAL NAVIGATION FEATURES


LANGUAGE

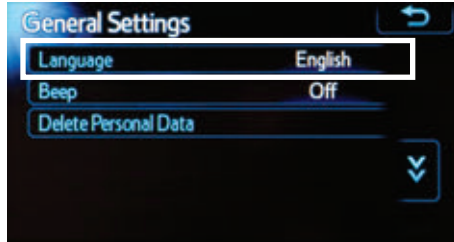

PRESS **SETUP** > **General**

Select Language Preference: English or Español. Touch save.

BEEP SETTING

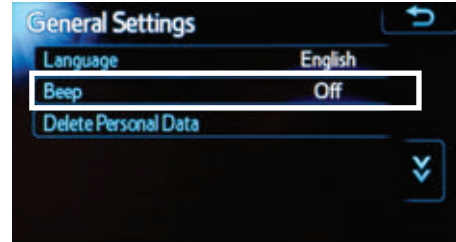

PRESS **SETUP** > **General**

Turn the Beep sound On or Off. Touch save.

KEYBOARD LAYOUT



PRESS **SETUP** > **General** > 

Set the layout of the keyboard as alphabetical or standard QWERTY keyboard.


NAVIGATION PROMPT VOLUME



PRESS **SETUP** > **General** > 


Adjust the Navigation prompt volume.

VOICE RECOGNITION ADVANCED ONE SHOT ENTRY

Press  on the steering wheel to activate the voice recognition advanced one shot entry. After the beep, say one of the voice commands shown on the screen. Please refer to the Owner's Manual for additional information.

Quick Tip - If you know your next command, you can press  at any time to interrupt the prompt. Say your command after the beep.




GENERAL VOICE COMMANDS

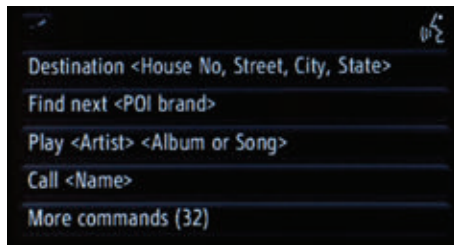

ADDITIONAL VOICE COMMANDS





NAVIGATION COMMANDS

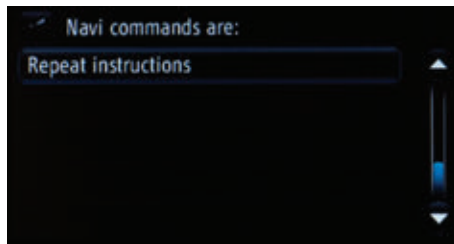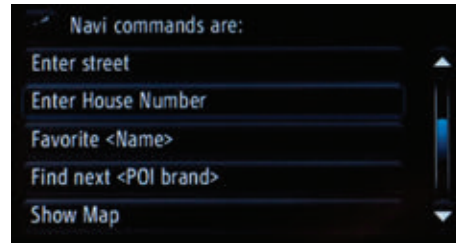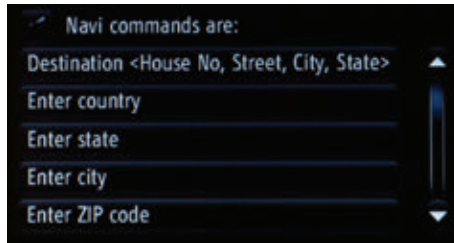


VOICE RECOGNITION ADVANCED ONE SHOT ENTRY

MEDIA COMMANDS

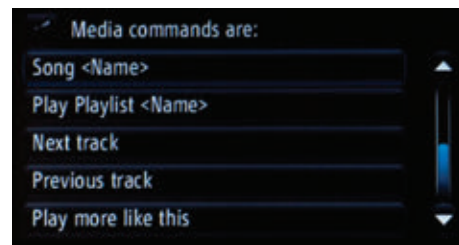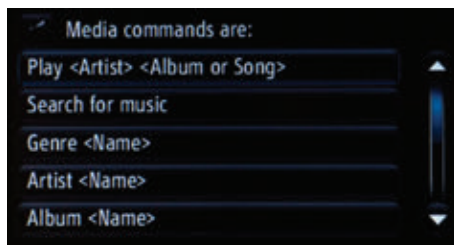

PHONE COMMANDS

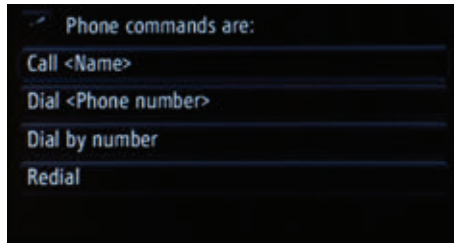

RADIO COMMANDS





01999YY01700



TOYOTA Owners

toyota.com/owners

CUSTOMER EXPERIENCE CENTER

1-800-331-4331



Printed in U.S.A. 11/11
11-CAC-05626

00505-ENT-12-CAD2